

# Splash

by **STRONG**

## User Manual


# Splash

by **STRONG**

## User Manual

### GETTING STARTED

- a) On/Off Switch
- b) Action Button
- c) 3.5mm Audio Input
- d) Charging Port
- e) Status Light
- f) Charging Indicator

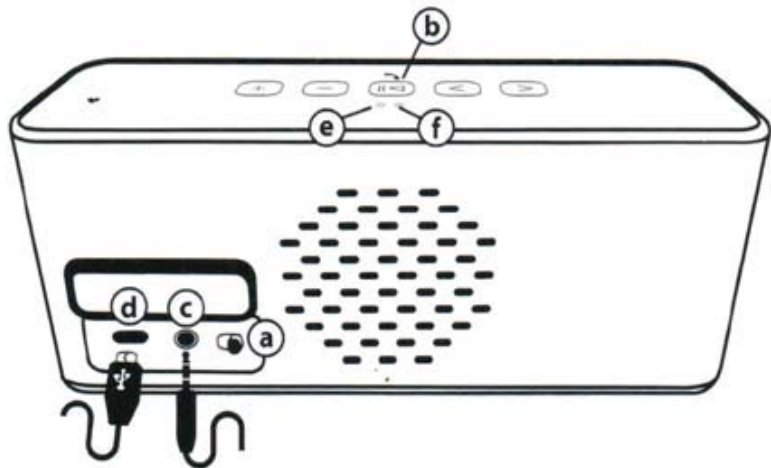

#### a) On/Off Switch

Slide the switch to the right to turn the Splash on. You will hear a two-tone sound, indicating that the speaker is on.

Slide the switch to the left to turn the Splash off. You will hear a two-tone sound, indicating that the speaker has been switched off.

**Note:** Do not flip the power switch on/off rapidly. Wait for the sound before moving the switch again.

#### b) Action Button (Bluetooth) – Pairing With Your Phone or Bluetooth Device

- 1) Switch ON the Splash. The Bluetooth Status Light (e) will flash slowly.
- 2) Press and hold the Action Button for about 3 seconds. You will hear a low-pitched 'beep' and the Bluetooth Status Light will flash quickly. The Splash is now in pairing mode.
- 3) Enable Bluetooth on your phone or device.\* Then select "Splash" from the list of discoverable devices.

#### d) Charging Port – Charging the Battery

For best results, ensure the Splash is fully charged before use.

Connect the supplied AC power adaptor to the charging port, and plug it into your wall outlet. The green charging indicator will remain illuminated while the unit is charging. The indicator will automatically switch off when the unit is fully charged. Allow 2.5 hours for the battery to fully charge. The Splash may be used while it is charging\*.

\*NOTE: You may charge the Splash by connecting it to your computer with a micro USB cable. However, if you intend to use the Splash while charging, charge only with the supplied power adaptor. Audio output quality may suffer during playback while charging via computer.

#### e) Status Light

If the blue LED is...

- Flashing slowly

The Splash is switched on, but not paired to a Bluetooth device.

\*Note: Procedures for activating Bluetooth will vary across devices. Consult the documentation that came with your device for further information.

4) If prompted for a PIN code, enter "0000" (4 zeros).

5) Allow around 10-15 seconds for the Splash to pair with your device. When pairing is successful, you will hear a high-pitched 'beep' and the Bluetooth Status Light will remain steadily lit.

#### c) 3.5mm Audio Input – Plug & Play

The Splash can connect to any device with a 3.5mm stereo jack. Use the supplied 3.5mm input cable to plug and play, no Bluetooth required.

Audio content via 3.5mm stereo input will override audio streamed via Bluetooth.

#### Flashing quickly

The Splash is in pairing mode and ready to pair with your phone or Bluetooth device.


#### Steadily lit

The Splash is paired with your phone or Bluetooth device and ready to use.

#### f) Charging Indicator

A steady red light indicates that the battery is low and should be recharged soon. When charging, this light shows green until the Splash is fully charged.

## USING THE SPLASH

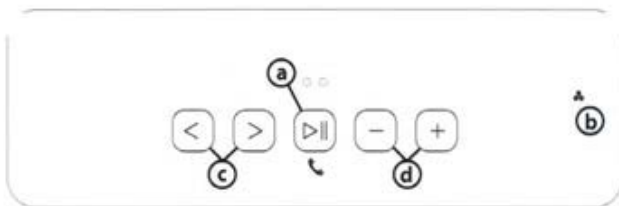

- a) Action Button
- b) Built-in Microphone
- c) Playback Controls
- d) Volume Controls

During a phone call, press the **( < )** button once to switch between using the Splash and your phone to talk. You will hear a 'beep', indicating that the call has been transferred to your phone or the Splash.

When the Splash is paired to your phone, it can be used to call the last number dialed in your phone by pressing the **( > )** button for three seconds or more.

### c) Playback Controls – Skip to a Track

When streaming audio via Bluetooth, press the **( > )** button to skip forward to the next track in your playlist. Press the **( < )** button to skip back to the previous track in your playlist, or to the beginning of your current track.

### d) Volume Controls – Setting the Best Sound

Change the volume by pressing the plus and minus buttons. If you hear a beep when pressing the plus button, the Splash has reached its maximum volume output. To get the best sound, make sure the Splash is standing on its base and the front grill is facing towards you.

## TROUBLESHOOTING

### a) Unable to pair with your Bluetooth device?

- 1) Ensure that your phone/device is Bluetooth compatible, and that Bluetooth has been enabled correctly. Check the documentation that came with your phone/device for further instructions.
- 2) Ensure that your phone/device is within a few feet of the Splash.
- 3) If your phone/device is connected to a number of other Bluetooth devices, disconnect some of them before pairing with the Splash.
- 4) Turn Bluetooth off and then on again in your phone/device. If the Splash still won't pair, remove it from the list of discoverable devices and retry the pairing process from the beginning.
- 5) Ensure that both devices are sufficiently charged.

### b) Problems with the sound?

- 1) For sound distortion, try lowering the volume on the Splash or your phone/device.
- 2) Move the Splash closer to your phone/device.
- 3) Connect your phone/device to the Splash via the 3.5mm input cable rather than

### a) Action Button

**Play/Pause** – During audio playback, press once to pause the track. Press again to resume playback.

**Answer/End a Call** – Incoming and outgoing calls are given priority over Bluetooth audio playback. (But not 3.5mm input: see above.) If a call comes in when streaming audio, the track will pause and your ringtone will play through the speaker. Press the Action Button once to answer and end calls via the speaker and speakerphone. The audio track will resume once the call is ended.

To reject an incoming call, press and hold the Action Button for 1-2 seconds until you hear a 'beep'.

### b) Built-in Microphone – Making Calls

The Splash may be used as a wireless speakerphone. Use your phone to dial as usual, and speak toward the built-in microphone located at the top of the unit. The built-in microphone only works when your phone/device is connected via Bluetooth.

When connected via Bluetooth: turn the volume up on your phone/device to its maximum and then use the Splash volume controls to adjust.

When connected via 3.5mm input cable: turn down the volume on your phone/device before adjusting the volume on the Splash. The audio signal may be distorted if the volume on your phone/device is up too high.

## SPECIFICATIONS

Bluetooth: Version 2.0

Bluetooth Range: 10m

Water & Dust Resistance Rating: IP55

Battery Life: Up to 7 hours playback time (varies by volume level and audio content)

Audio Output Power: 2 x 3W

Speaker Driver: 2 x 40mm 4 ohm

AC Adaptor: 5V/2.6A with Micro USB plug

Supports Bluetooth A2DP audio profile, Bluetooth Handsfree profile (HFP) and Headset Profile (HSP)

Bluetooth. Ensure that the cable is fully inserted at both ends.

4) Ensure that both devices are sufficiently charged.

### c) Splash not responding to commands?

- 1) Switch the Splash off and then on again.
- 2) Reset the Splash by turning the unit on, and then press and hold both playback control buttons ( **( < )** and **( > )** ) for 3 seconds.
- 3) If there is still no response after step 2, connect the unit to the supplied power adaptor or computer USB port and repeat step 2.
- 4) Ensure that both devices are sufficiently charged.

### d) Problems making and receiving calls with the Splash?

If you encounter problems using the hands-free function of the Splash, ensure that Wi-Fi is disabled in your phone, as this may interfere with the Bluetooth connection.

For further technical support and information, please visit our website [www.strong.com.au](http://www.strong.com.au) or email technical support at [tech@strong.com.au](mailto:tech@strong.com.au)

## WARNINGS

Read all instructions and warnings before using this product to ensure your personal safety and prevent property damage.

The Splash has a water resistance rating of IP55, meaning it is protected against water drips, sprays, splashes and jets projected by nozzles of up to 6.3mm. It is NOT protected against water immersion or submersion and should never be placed under or in water.

- Do not expose this product to fire or other sources of excessive heat.
- Do not leave this product in direct sunlight for extended periods of time.
- Do not block any ventilation openings.
- Do not disassemble this product or attempt to modify it in any manner. Unauthorized alterations may compromise safety, regulatory compliance, product performance, and will void the warranty
- Do not expose this product to excessive impact or other physical abuse.

Do not insert anything into this product unless otherwise specified in the user manual.

- Do not use abrasive cleaners on this product. Wipe it with a soft, water-dampened cloth.
- Only charge the battery in accordance with the user manual supplied. Use only the manufacturer supplied charger. Using other chargers as non-approved chargers could result in electric shock and/or damage the Splash.
- Do not charge the Splash in damp areas or in extremely high or low temperatures, as this could result in electric shock.
- Do not attempt to replace the product's built-in battery.
- Obey all signs and displays that require an electrical device or RF radio product to be switched off in designated areas.
- Do not place the Splash on high surfaces. During music playback, the product may move or shift, causing it to fall off the edge.
- Do not dispose of the Splash in a fire. The battery could explode causing injury or death.
- Dispose of the Splash and its battery in accordance with local regulations. Do not dispose of battery with regular household waste.

7

[www.strong.com.au](http://www.strong.com.au)