

Button Key for STRONG Remote Controls

This is a sample remote control for a STRONG DVR (Remotes will vary from Model to Model). Please note that buttons may change colour from listed below on varying models, please refer to your User Manual for your particular model's remote control.



The number pad (Left) can be used to select channels



The control section can be used to adjust volume or move up and down through channel list



Power Button, turns receiver on and off Standby Mode



Mute (Turns audio off)



Play, for playing recorded or media files (on DVR or DVR Ready models)



Subtitle, to turn on or off subtitles on programs with Closed Captions



Stop, to stop recorded or Media files playing



Record, (may also be red button with white dot) for instant record



Pause, to pause a file



Fast Forward, to forward through recorded programs



File List, to bring up list of pre recorded programs



Fast Rewind, to rewind through recorded programs



Up & Down, used to adjust volume or scroll through channels



Skip forward or back, allows advertising skipping of pre selected time, ie; 30 seconds, 3 minutes (On selected models)